

FOR
PAPER

PRINT REPLACEMENT CARTRIDGE

NATURECARE EZC
PRINT REPLACEMENT CARTRIDGE

The Champion cartridge contains a Single Part Developer, Two Part Bleach Fix and a Single Part Rinse in an easy-to-use cartridge system. There are no changes required to the processor and the Champion product can be introduced directly on top of any other brand of chemistry. Simply insert the NatureCare EZC chemical cartridge into your Agfa Dlab 1, 2 or Net lab printer processor ...it is that easy to make the switch.



- Easy-to-use Drop-in Replacement for the Agfa Easy Box 110.
- Clean, stable odor free formulations.
- Can be used with all manufacturers' emulsions.

SUPPLIES

| Process Bath(s) | Product Description | To Make | Product Code |
|-----------------|---|--|--------------|
| P1/P2/P3 | NatureCare EZC Print Replacement Cartridge | 110m ² per cartridge 2 cartridges per carton | 140189 |
| P1-S | 47 Print Developer Starter | Variable | 140407 |

PROCESS SPECIFICATIONS

**recommended starting point

***depends upon on # of wash tanks used

| Step | Processing Stage | Processing Time (Sec) | Recommended Temp. | Replenishment Rate | Preparation of Working Solution (1L) |
|-----------|---|-----------------------|-------------------|---|---|
| P1 | NatureCare EZC Print Developer Replenisher | 33 ± 2 | 37.7-40.3°C | 41 ± ml/m ² +10 ml water | 1) 900ml Water 2) 40ml Concentrate 3) 60ml 47 Print Dev Starter |
| P2 | NatureCare EZC Bleach-Fix Replenisher | 33 ± 2 | 38±2.0°C | 68± 2ml/m ² | 1) 755ml Water 2) 170ml Part A 3) 75ml Part B |
| P3 | NatureCare EZC Rinse | 69 ± 5 | 37±3.0°C | 41 ± mls/m ² + 159 ml water | 1) 977ml Water 2) 23 ml concentrate |

CHEMISTRY SPECIFICATIONS


| | P1 NatureCare EZC Print Developer Replenisher | | P2 NatureCare EZC Bleach-Fix Replenisher | | P3 NatureCare EZC Rinse | |
|-------|---|------------------|--|------------------|-----------------------------------|------------------|
| | Seasoned Tank | Replenisher Tank | Seasoned Tank | Replenisher Tank | Seasoned Tank | Replenisher Tank |
| pH | 10.3±0.10 | 12.5 | 7.17±0.10 | 5.4 | 7.56±0.10 | 7.7 |
| Sp Gr | 1.038 | 1.049 | 1.114 | 1.133 | 1.014 | 1.003 |

Agfa Dlab & Easy Box 110 are registered trademarks of the Agfa Gevaert.


Replenisher Solutions

*Mix well


P1 - NatureCare EZC Print Developer Replenisher

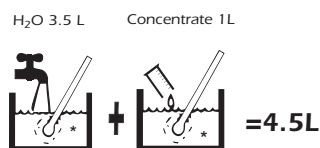

P2 - NatureCare EZC Bleach-Fix Replenisher

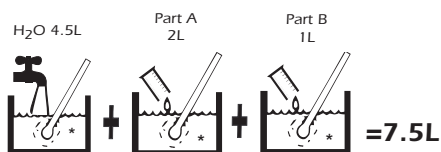


P3 - NatureCare EZC Rinse

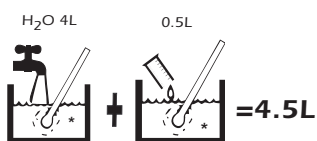


Working Solutions:


P1 - NatureCare EZC Print Developer Replenisher

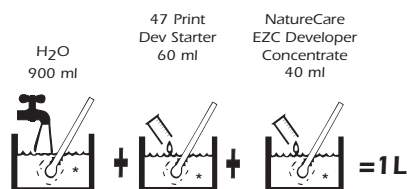

P2 - NatureCare EZC Bleach-Fix Replenisher

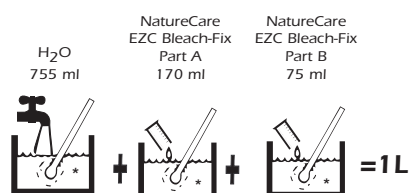

P3 - NatureCare EZC Rinse

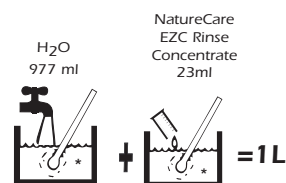

STORAGE OF CHEMICALS

Concentrates

All of the processing system concentrates have a normal storage life of at least 12 months, when held in unopened containers under steady temperature conditions 13° - 18°C (56°F - 66°F). However, storage temperatures below 5°C (41.5°F) should be avoided as some crystallization may occur.

Working Solutions and Replenishers

Machine tank solutions should not be allowed to stand unused for more than one week, or the activity will be reduced by aerial oxidation. No more than one week's supply of any of the replenisher solutions should be made up at a time. Replenisher solutions should be kept covered with lids to reduce evaporation, oxidation and contamination.

Safe Use of Processing Chemicals

All chemicals should be kept out of reach of children. Refer to labels on the box and to the Material Safety Data Sheet for precautionary information. Protective clothing, including gloves and face/eye protection should always be worn when handling chemicals.

Contact our Service Plus Department or your local representative to determine which combination of chemicals is best suited for you.

WARRANTY: Seller, Champion Photochemistry Limited, expressly disclaims any and all warranties, express or implied, including any warranties of merchantability or fitness. Seller's sole obligation for defect is to replace the defective product. In no event shall seller have any liability for incidental or consequential damages.

Manufactured By

CHAMPION PHOTOCHEMISTRY

Lot 28-B Mukim Batu Industrial Area, 6½ Miles Jalan Kepong
52000 Kuala Lumpur, Malaysia
Tel: (603) 6257-2600 Fax (603) 6257-2622
Website: www.championphotochemistry.com